

INFORMATION GUIDE

DFG250 GRINDER

PLEASE CHECK THE FOLLOWING UPON DELIVERY



THE FLY LEAD



DUST EXTRACTION OUTLET



WATER TAP ON SIDE




REMOVABLE WEIGHT



SWITCHES, PLUGS & BUTTONS

TO RESERVE ANY
OF OUR TOOLS OR
MACHINES CALL
US ON
01245 399150

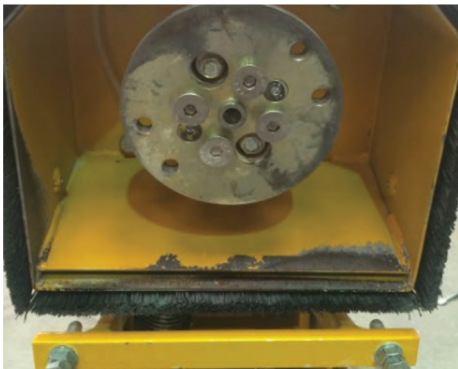

UNDERNEATH MACHINE



HEIGHT ADJUSTMENT WHEEL



REAR WHEELS (WITH RETAINING PIN)



ACCESSORIES KIT INCLUDES

- 1 SCREWDRIVER
- 1 SMALL ALLEN KEY
- 1 LARGE ALLEN KEY
- 1 SPIRIT LEVEL

- 1 SAFETY KIT
- 4 SPARE BOLTS
- 5 FUSES
- 4+PCD SPARE BOLTS
(SMALLER BOLTS)

SETTING UP THE MACHINE



1. FIT YOUR BLADE TO THE BOTTOM OF THE MACHINE
2. LOWER THE BLADE ONTO THE FLOOR (USING THE FOOT PEDAL AT THE BACK)
3. PLACE THE SPIRIT LEVEL ON TOP OF THE MOTOR (PARALLEL WITH THE MACHINE)
4. LEVEL THE MACHINE TO THE FLOOR USING THE HEIGHT ADJUSTMENT WHEEL, AND SECURE IN PLACE USING THE LOCKING KNOB



STARTING THE MACHINE

1. ENSURE THE RED SWITCH IS SET TO 'ON' AND THAT THE FUSE BOX IS SHUT PROPERLY
2. ENSURE THE RED BUTTON IS PULLED OUT (RED LIGHT SHOULD BE ON)
3. ENSURE THAT THE BLADE IS OFF THE GROUND (FOOT PEDAL AT THE BACK SHOULD BE IN LOWER POSITION)
4. PRESS THE GREEN BUTTON
5. ONCE THE MACHINE HAS STARTED, LOWER THE BLADE TO THE FLOOR USING THE FOOT PEDAL

NOTES (PLEASE READ BEFORE USING MACHINE)

- IF THE MACHINE IS USED WET, ENSURE ALL THE SLURRY AND DEBRIS IS WASHED OUT/REMOVED FROM THE MACHINE BEFORE IT SETS
(DO NOT GET THE MOTOR OR ELECTRICAL BOX WET!)
- INSIDE THE ELECTRICAL BOX THERE IS A FUSE, WHICH WILL STOP THE MACHINE FROM WORKING IF TRIPPED
(NEVER OPEN THE ELECTRICAL BOX WHILST THE MACHINE IS PLUGGED IN)
- IF THE ELECTRICAL BOX IS NOT CLOSED PROPERLY THEN THE MACHINE WILL NOT START, DUE TO THE MICRO SWITCH INSIDE

